



# Chrome Shelving - Assembly Instructions

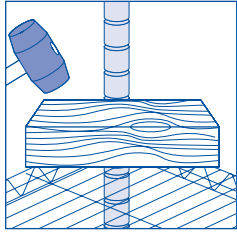

**Tools required:**  
Rubber mallet and  
wood block

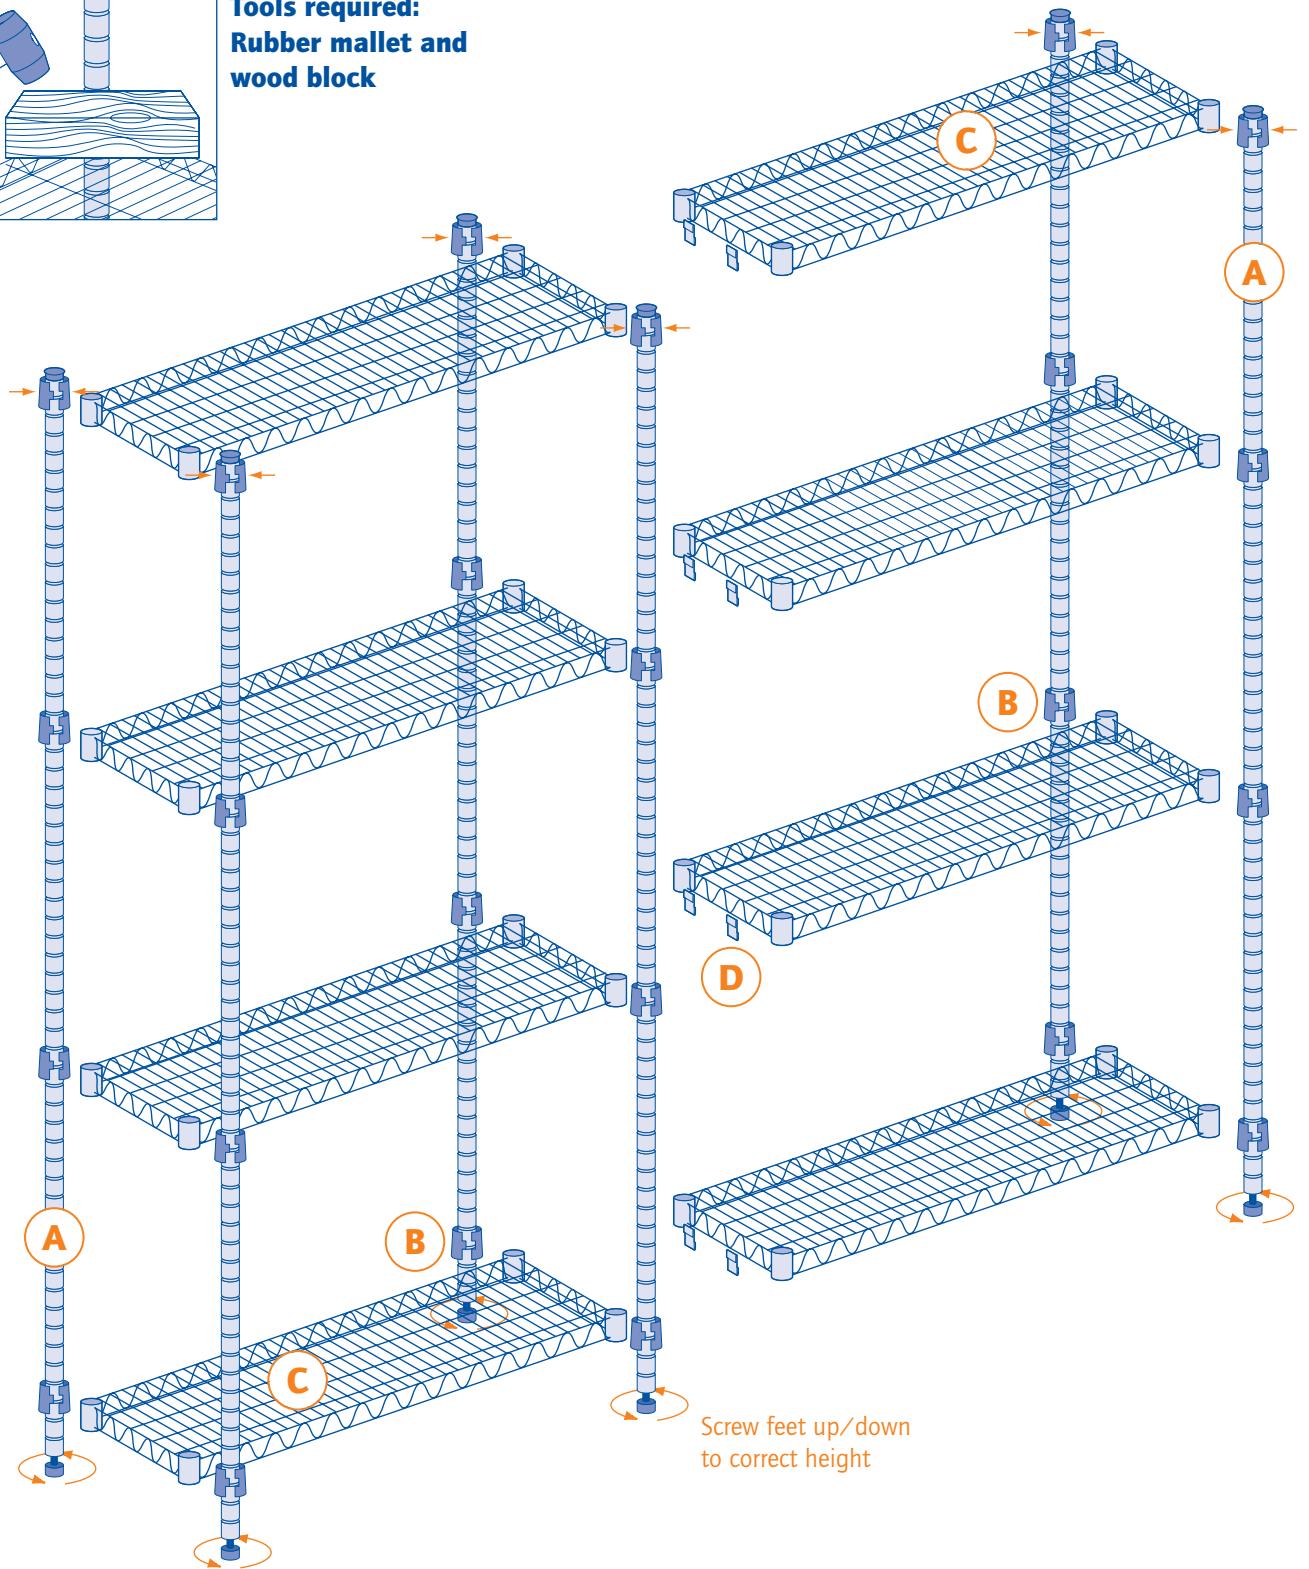


## ASSEMBLY

- 1** Take a chrome upright **A** and shelf clip **B**. Starting at the bottom, locate the shelf clip in the ring of the uprights at the selected height. Repeat for other 3 uprights. Ensure the clips are firmly located in the upright ring and the clip is tapering upwards (thin end at the top).
- 2** Slide shelf **C** down uprights **A** onto clips **B**. Tap the shelf with a mallet to tighten on the clips.
- 3** Clip second level clips **B** into place then slide shelf **C** onto the clips, repeat for third shelf and then finally top shelf. Tapping the shelves with a mallet to tighten on the clips.
- 4** Locate extension bays using clips **D**.

**IMPORTANT - ASSEMBLY INSTRUCTIONS**

# COMPONENTS

**A** Uprights- 4 of per bay

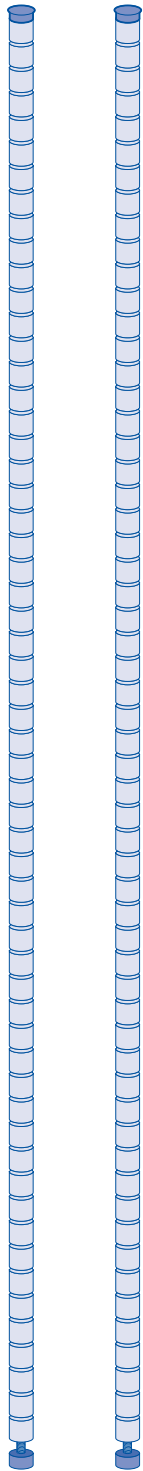


660mm, 800mm, 965mm, 1270mm,  
1600mm or 1880mm

**B** Shelf clips (pair)



4 pairs  
per shelf

**C** Chrome shelf  
1 of per shelf level, various  
widths and depths

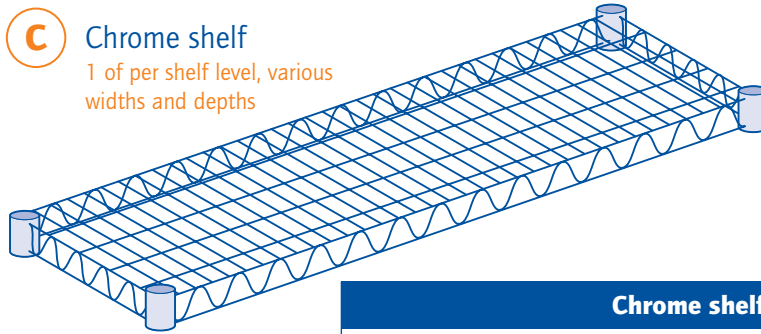

### Chrome shelf sizes

Widths	915 mm, 1220 mm, 1525 mm and 1830mm
Depths	355 mm, 455 mm and 610 mm
Other	455mm sq, 610 mm sq, 610 x 355 mm and 610 x 455 mm

**D** Shelf clips with  
extension bays  
8 of per bay



2 per shelf level

# SAFETY



Keep heavier items  
on the bottom shelves



Keep your  
shelving dry



Do not climb  
on your shelving



Make sure it is on a  
level and even floor