
# **ARCHIVE STORAGE**

#### **Tools required: Rubber mallet**

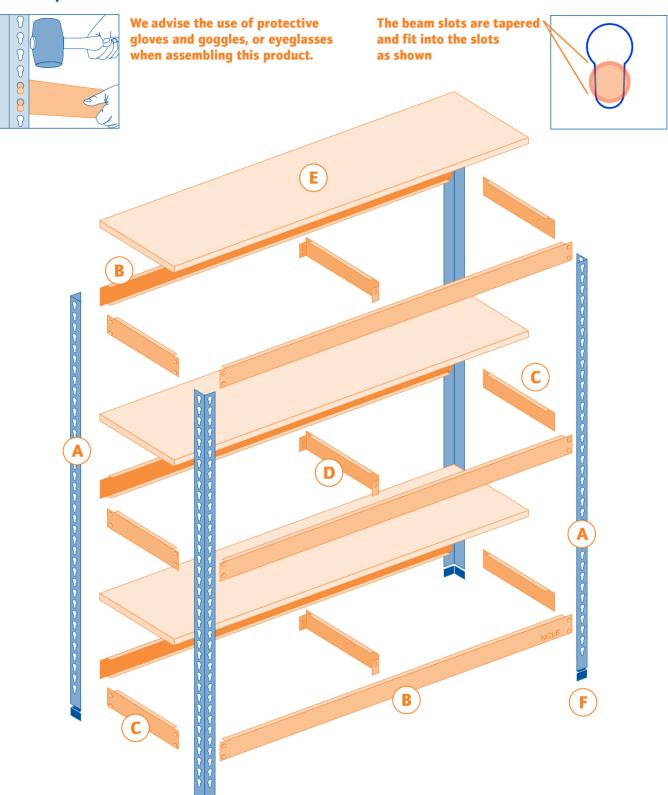



### **BAY ASSEMBLY**

- 1 Fit plastic feet to uprights.
- 2 Assemble both ends first A and C. Starting from the top allow 15 clear holes between each shelf support C.
- 3 Join both ends using front and rear beams B.
- 4 Add shelf supports **D.**
- 5 Add shelves E.

## **ARCHIVE STORAGE**


### **COMPONENTS**

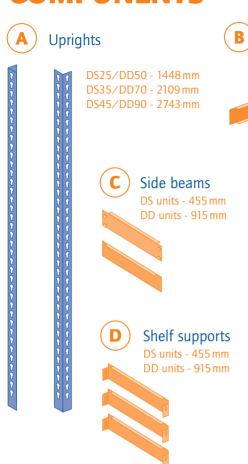

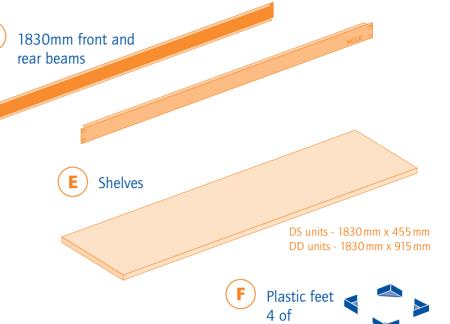

Rapid 1 Archive Storage, Component Check List						
	DS25	DD50	DS35	DD70	DS45	DD90
Uprights 'A'	4	4	4	4	4	4
Front/Rear Beams 'B'	6	6	8	8	10	10
Side Beams 'C'	6	6	8	8	10	10
Shelf Supports 'D'	3	3	4	4	5	5
Chipboard Shelf 'E'	3	3	4	4	5	5
Plastic Foot 'F'	4	4	4	4	4	4
Archive Box 'G'	25	50	35	70	45	90

### **BOX ASSEMBLY**

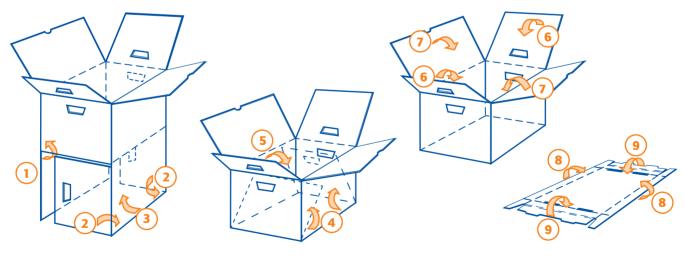

#### **SAFETY**

